


WIRELESS ANCHOR WINCH CONTROLLER

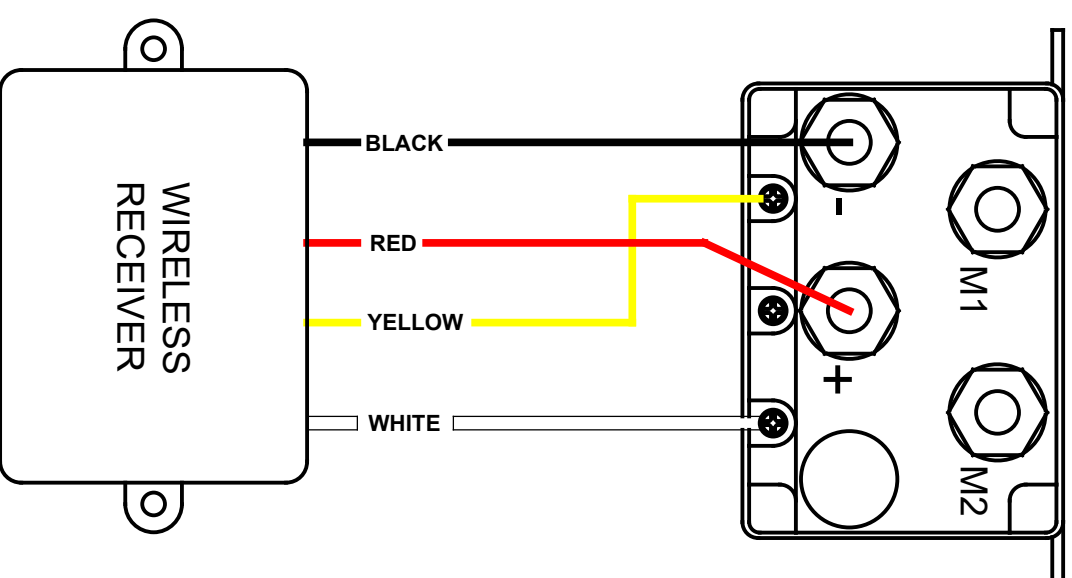

SOLENOID



STEP 1
ENSURE POWER TO SOLENOID IS OFF

STEP 2
MOUNT RECEIVER NEAR SOLENOID

STEP 3
CONNECT RED LEAD TO POSITIVE POST (MARKED +)

STEP 4
CONNECT BLACK LEAD TO NEGATIVE POST (MARKED -)

STEP 5
CONNECT WHITE AND YELLOW LEADS TO SWITCHING POSTS

STEP 6
SUPPLY POWER TO SOLENOID

STEP 7
PRESS RED BUTTON ON REMOTE

STEP 8a
PUSH IN AND OUT BUTTONS ON REMOTE TO TEST WINCH DIRECTION

STEP 8b
IF WINCH DIRECTION IS BACKWARDS, SWAP WHITE AND YELLOW WIRES

NOTE:
IF YOUR SOLENOID HAS BLADE TERMINALS, CUT OFF EYELETS FROM WHITE AND YELLOW LEADS AND FIT FEMALE SPADE TERMINALS TO SUIT